


RISO FW Series - Obtaining Meter Reading

Meter readings can be obtained from the RISO FW Series in two different ways as follows:

1 Using the Operational Panel "Function Keys"




A] Press the > F1 button > on FW Operation

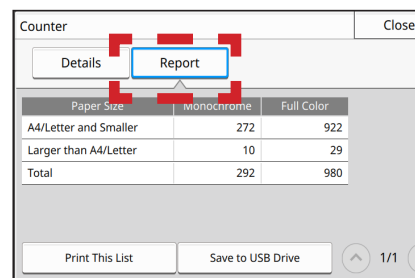


B] Counter > Details > will open where you can view or print out the meter reading.


2 Via the Operational Panel "Home Page"

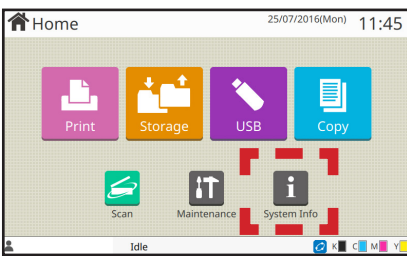

A] In Home page select:
> System Info >

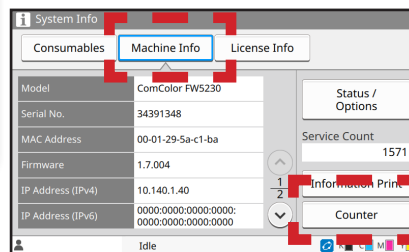

B] In System Info select:
> Machine Info > Counter

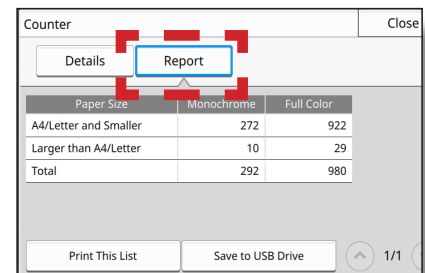

C] Counter > Details > will open where you can view or print out the meter reading.